


# Installation

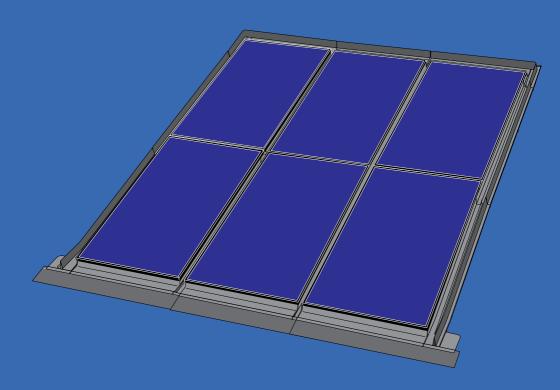










■ F16-TY \_\_\_\_\_ (n-1)

■ 16-J (n-1) x (m-1)



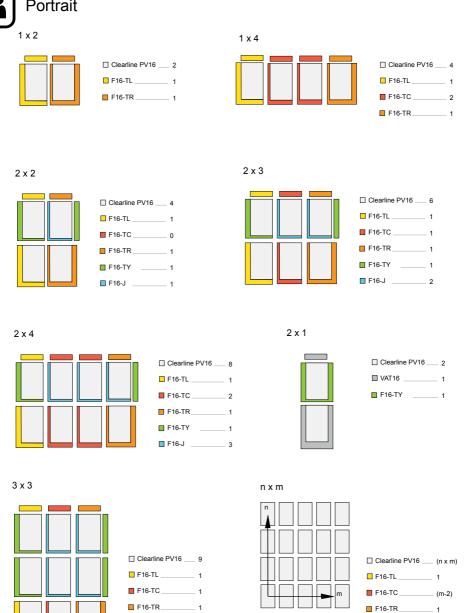


1

■ F16-TY \_\_\_\_\_ 2


■ 16-J

 





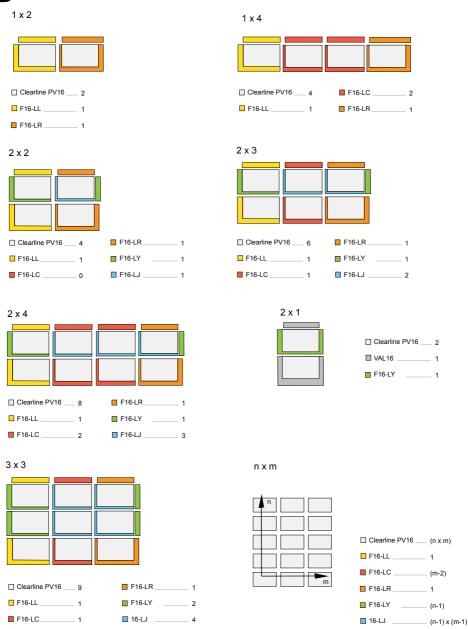



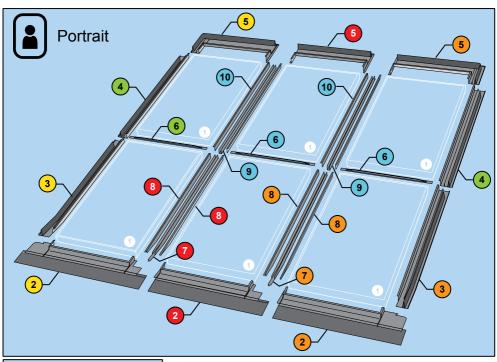





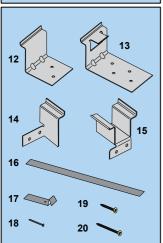


		□ TL	■ тс	■ TR	■ TY	<b>■</b> J
1	Clearline PV16					
2	Sill flashing	1	1	1		
3	Lower side flashing	1		1		
4	Upper side flashing				2	
5	Top flashing	1	1	1		
6	Joining strip				1	1
7	Lower gutter		1	1		
8	Lower gutter cover		2	2		
9	Upper gutter					1
10	Upper gutter cover					2
11	Tile support	1	1	1		
12	Rafter bracket	4	4	4		
13	Combi rafter bracket				2	2
14	Batten bracket	3		3	6	
15	Combi batten bracket		3	3		3
16	Gutter fixing strip		1	1		1
17	Side fixing tab	6		6	12	
18	Nail	6	1	7	12	1
19	4 x 25mm screw	6	6	12	12	6
20	4 x 50mm screw	8	8	8	8	8



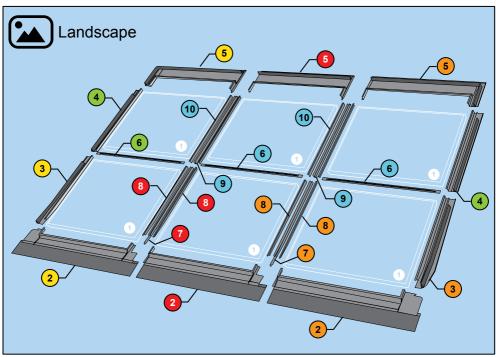

 

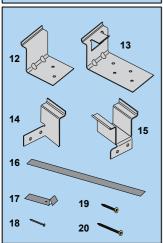

		□ LL	LC	■ LR	■ LY	■ LJ
1	Clearline PV16					
2	Sill flashing	1	1	1		
3	Lower side flashing	1		1		
4	Upper side flashing				2	
5	Top flashing	1	1	1		
6	Joining strip				1	1
7	Lower gutter		1	1		
8	Lower gutter cover		2	2		
9	Upper gutter					1
10	Upper gutter cover					2
11	Tile support	1	1	1		
12	Rafter bracket	6	6	6		
13	Combi rafter bracket				3	3
14	Batten bracket	2		2	4	
15	Combi batten bracket		2	2		2
16	Gutter fixing strip		1	1		1
17	Side fixing tab	4		4	8	
18	Nail	4	1	5	8	1
19	4 x 25mm screw	4	4	8	8	4
20	4 x 50mm screw	12	12	12	12	12



#### You will need















- Flashings may have sharp edges, wear gloves
- The installation must comply with local regulations on lightning protection.
- Viridian Solar recommends that the panel installation is carried out by an installer with roofing competence.


#### For best results

- Don't rush it.
- Lubricate gaskets with window cleaning fluid or soapy water and run a flat bladed screwdriver along the gasket to open it up before pushing in the flashing.
- Ensure the flashing edges are straight.

#### Electrical

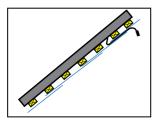

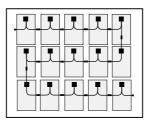

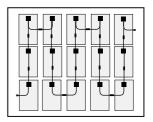

Electrically test each solar panel as it is installed.


Cables can be passed through roofing membrane laps for connection inside the building (recommended) or connected to adjacent panels in the batten space.

Choose to connect panels in rows or columns based on consideration of shading and potential difference. Panels can be installed with the junction box at the top or bottom.





### Portrait

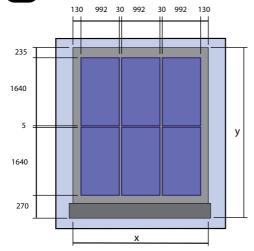




 $x = 260 + (m \times 992) + ([m-1] \times 30)$ 

$$y = 505 + (n \times 1640) + ([n-1] \times 5)$$



### Landscape

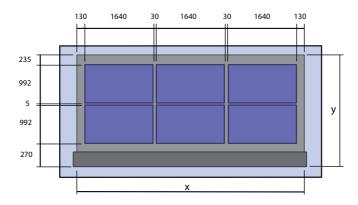




$$x = 260 + (m \times 1640) + ([m-1] \times 30)$$


$$y = 505 + (n \times 992) + ([n-1] \times 5)$$



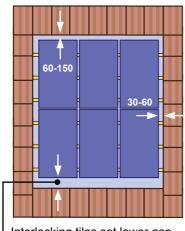


Interlocking tiles set lower gap 130-150mm. Reduce for thinner tiles, if unsure - contact us

#### Slate

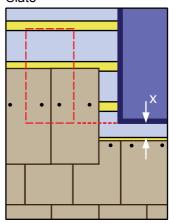

For best results align the bottom edge of panel with the slate line. This may require that slates below the panels are nailed in advance. If installing before slating, set x to 130mm.

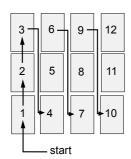


 
Start at the bottom left of the array. Move to the right as each column is finished.

 






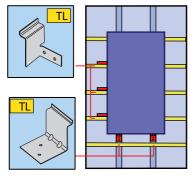











Start with the bottom left panel. Brackets rotate into the lower slot on the panel frame.

Fix the batten brackets (14) to the left side with two 25mm screws (19) each. Fix rafter brackets (12) at the bottom to each rafter the panel crosses with two 50mm screws (20) each.




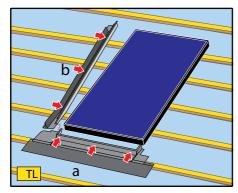

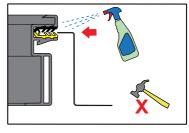


Fit the sill flashing (2) then the lower side flashing (3) to the panel. Flashings push into the rubber gasket seal in the upper slot of the panel frame. Take care to align the leading edge just above the yellow line on the gasket. Use soapy water or glass cleaning fluid to lubricate.



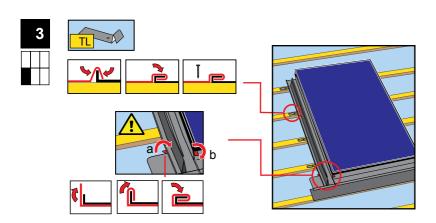


Secure the edge of the side flashing using side fixing tabs (17) and nail (18). Fold over the tab on the sill flashing (a) to grip the side flashing. Fold down the tab on the side flashing (b).

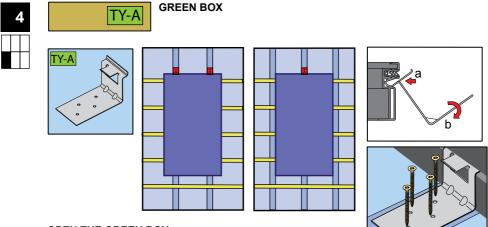

#### **OPEN THE GREEN BOX**


Fix combi rafter brackets (13) to each rafter the panel crosses with four 50mm screws (20) each.



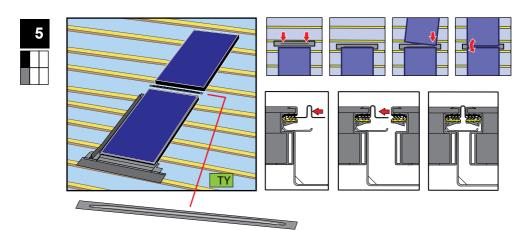

Push the joining strip (6) into the gasket on the top face of the lower solar panel. Align to the centre of the panel.


Slide the upper solar panel down the roof to simultaneously engage with the combi-bracket and the joining strip. Aligning the panels on the right corner then rotating the left corner downwards ensures a smooth connection.

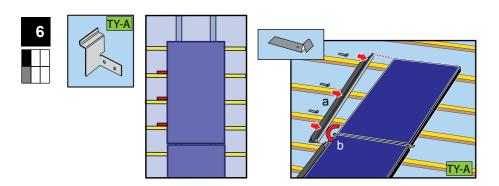


Fix the left side of the solar panel with batten brackets (14) and 25mm screws (19). Push in the upper side flashing (4) and fix the outside edge with side fixing tabs (17).

Fold the protruding end of the joining strip (6) down over the side flashing.



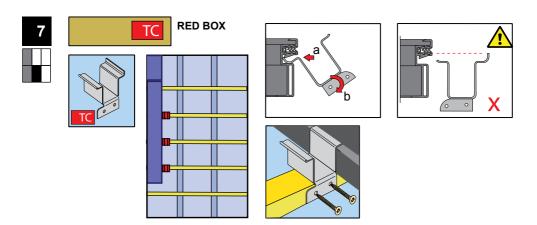



Fix combi-batten brackets (15) to the right hand side of the bottom solar panel. The bracket must be turned so that the side with the taller edge goes into the panel. Fix each brackets with two 25mm screws (19).

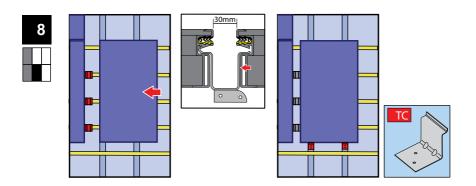


  
Slide the first panel of the next column sideways to engage with the combi-batten brackets. The bracket sets the gap to 30 mm. Secure the new solar panel to each rafter it crosses with rafter brackets (12) and two 50mm screws (20) each.



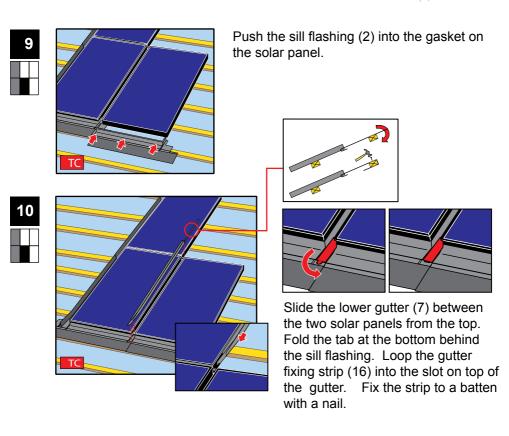

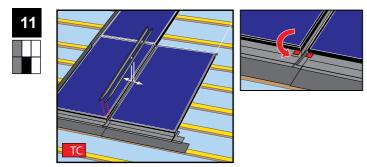








12





#### **BLUE BOX**

  
Fix combi-rafter brackets (13) to the top of the panel below and combi-batten brackets (15) to the right hand side of the panel to the left.

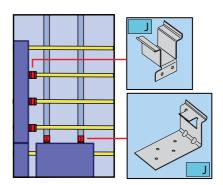



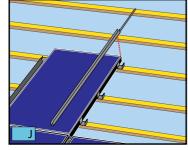






  
Fit the upper gutter (9) between the solar panels and nail the gutter fixing strip to a batten. Push the upper gutter cover (10) into the panel gasket. Fold the end of the joining strip down into the gutter.













For each rafter it crosses, fix a rafter bracket (12) to the top of the top left panel and secure with two 50mm screws (20) each. You may need to add a batten above the panel to support the top flashing. Push the top flashing (5) into the panel gasket. The tile support (11) is needed for some tile types. Feed the two straps under the foam and secure the straps to a batten above.





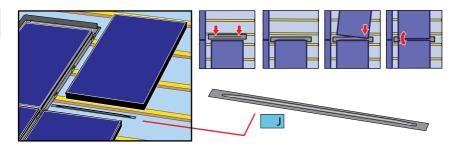


Push the joining strip (6) into the gasket in the top edge of the panel below and slide the solar panel in to engage with the joining strip and combi-brackets on two sides.

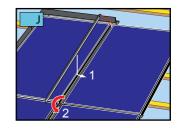

Fit gutter cover (10) into the panel gasket. Fold the end of the joining strip down into the gutter.



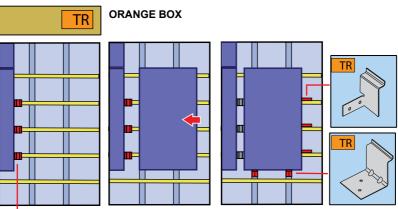




Fix three combi-batten brackets (15) to the right hand side of the panel to the left. Slide the new panel into position. Fix with rafter brackets (12) on the bottom edge and batten brackets (14) to the right hand side.








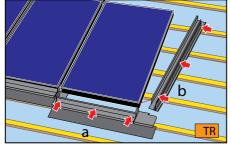

Push the sill flashing (2) into the gasket at the bottom of the solar panel. Push the lower side flashing (3) into the gasket on the right hand side of the panel.




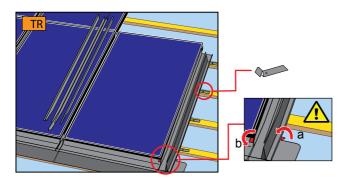



Fit the lower gutter (7), (16) and lower gutter covers (8). See steps 10 and 11.

 Fit side fixing tabs (17) and fold over the tab on the sill flashing. See step 3.



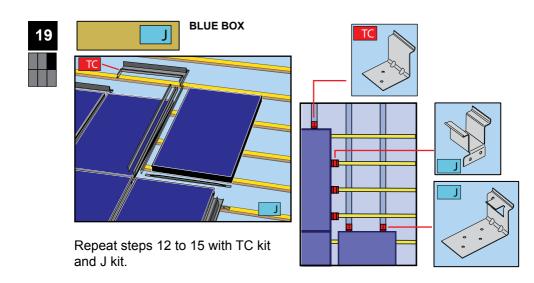

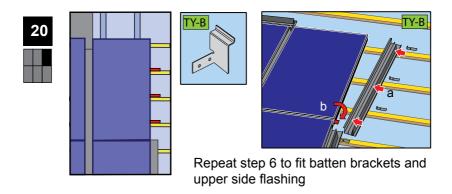





Repeat step 14 with TR kit

## Clearline tusion




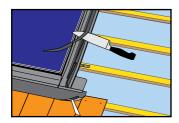


 

Remove the paper strip on the underside of the sill flashing and dress the lead down onto the tiles. For some tile types it may be necessary to chamfer the high points under the sill flashing.

  Lighter tiles will sit more neatly if the foam surround is trimmed.






For slates, trim the foam to within 10mm of its base and flatten over the outside edge of the flashing.







#### **SARKING BRACKETS**

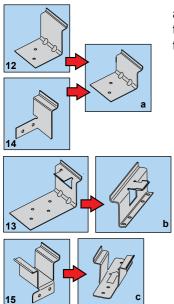

Where the roof has sarking boards, special kits are available for fixing. Fixing brackets replace those in the standard kit as shown. Align the brackets (a, b) top and bottom to fix through into rafters.

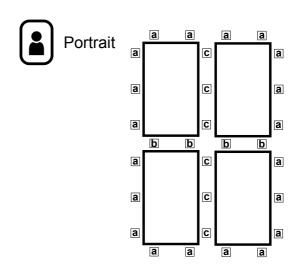



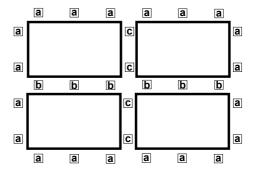



### **Mechanical Specification**

Thickness	mm	69
Static roof loading (distributed)	kg / m²	12.9
Characteristic Wind Resistance	kPa	5.32
Ultimate Design Load <sup>1</sup>	kPa	5.32
Fire Rating to BS 476-3		AA
Power Warranty	% rated	90%10 years, 80% 25 years
Standards		IEC61215, 61730, TUV, MCS012

¹ Design resistance to ultimate loads includes a partial material safety factor of 1.0 Tested batten size - 50mm x 25mm, rafter 35mm x 75mm, rafter spacing 600mm For sarking brackets - softwood sarking boards 100mm x 22mm

Viridian Solar
Atlas Building, 68 Stirling Way
Papworth, Cambridge.
CB23 3GY
T 01480 831 501
F 01480 831 831
www.viridiansolar.co.uk

